

Our patent-pending advanced curtain wall construction technique includes the following anchors:



Starter or Bottom J Course Anchor

Supplied in continuous twelve-foot sections, which are easily modified in the field with standard miter saws.

The Starter J anchor should be set first around the perimeter of the project. This anchor, along with the Standard T can be chopped into one or two inch segments for hanging specialty items.




Intermediate T Anchor

This anchor is used in the central field courses. It is also supplied in continuous twelve-foot section.



Top Course J Anchor

Also a continuous twelve-foot anchor designed to hold the top course panels in place. It should also be used when installing wall panels beneath window sills or any other condition where the vertical panel coursing is terminated.

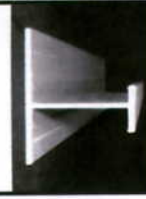

Standard T Anchor

Used for special installation situations as window surrounds or other architectural features.



L Brackets

Offered in varying lengths depending upon the horizontal measurement of the panel. Generally the six inch (6") L Bracket will exceed the requirements for most installations. Two (2) L brackets with self adhesive backed butyl flashing tape are used to snap the stone panels to the anchors.



Stone panels are pre-cut with a kerf for the L bracket

The stone panel is set in the "J" anchor and swung into position. The "L" bracket is snapped in the clip receptacle.

L Bracket
Foam Tape
Side view of stone with kerf